



PLC control- PLC OS Update Visilogic

**PLC OS Update in Visilogic**

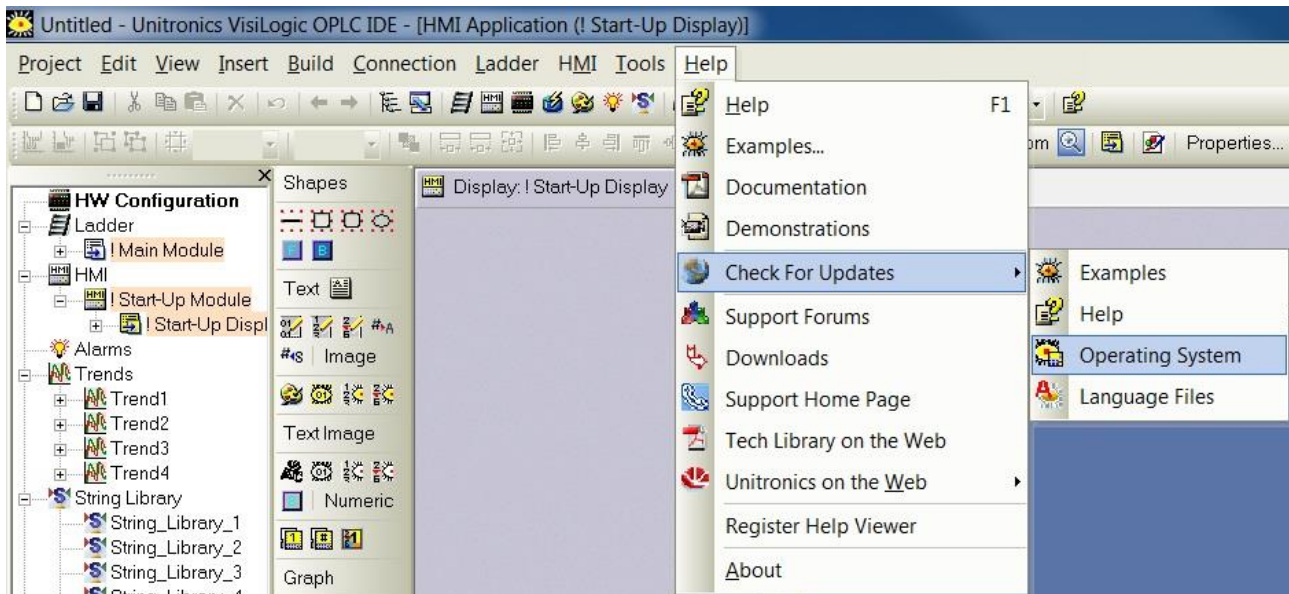


1. Connect your PLC and open Visilogic
2. Go to the 'Help' tab at the top of the screen
3. Select 'Check For Updates'
4. Select 'Operating System'

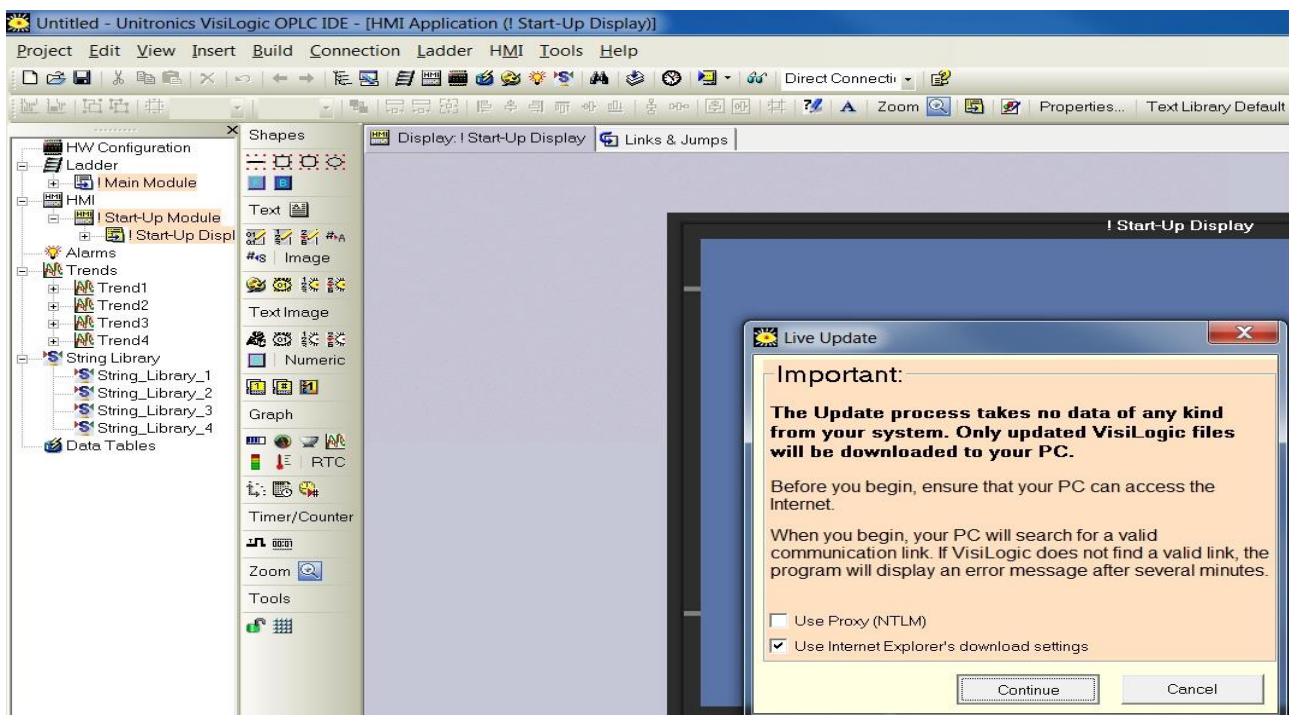


5. This will bring up the 'Live Update' window, ensure that 'Use internet Explorer's download settings' is selected and click 'Continue'

## PLC control- PLC OS Update Visilogic

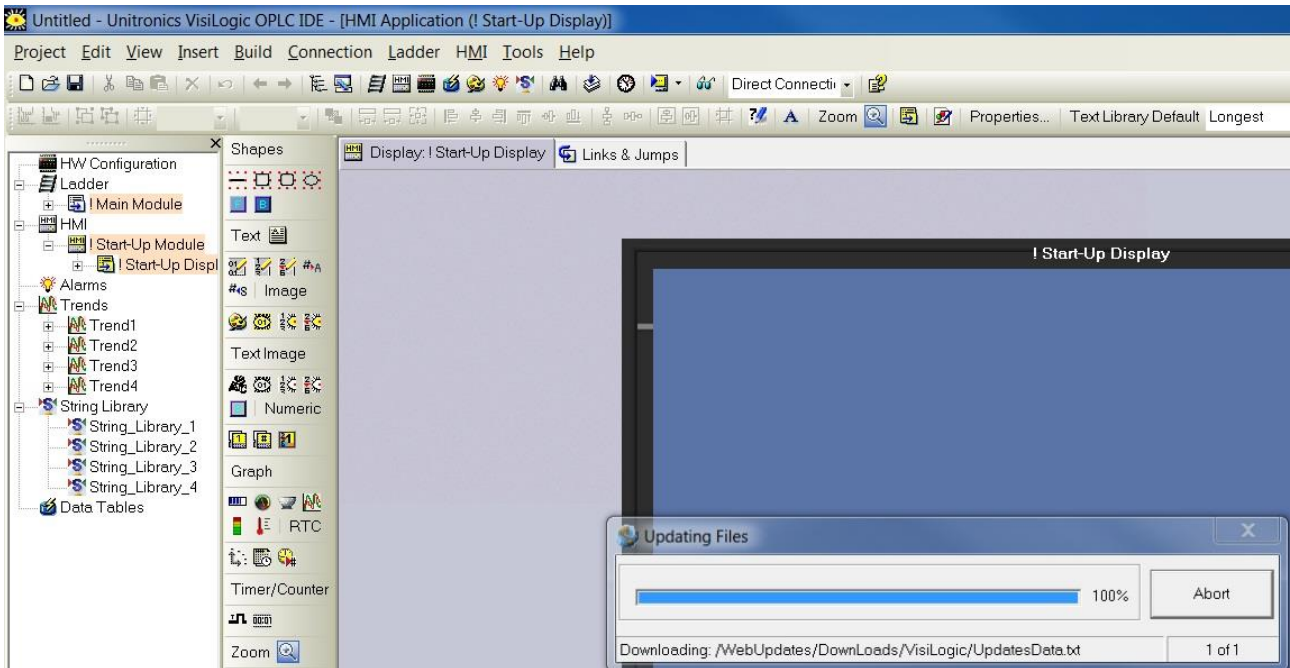


6. Visilogic will then search for the latest PLC OS and inform you if yours is up to date and if it isn't, the latest version will be installed.

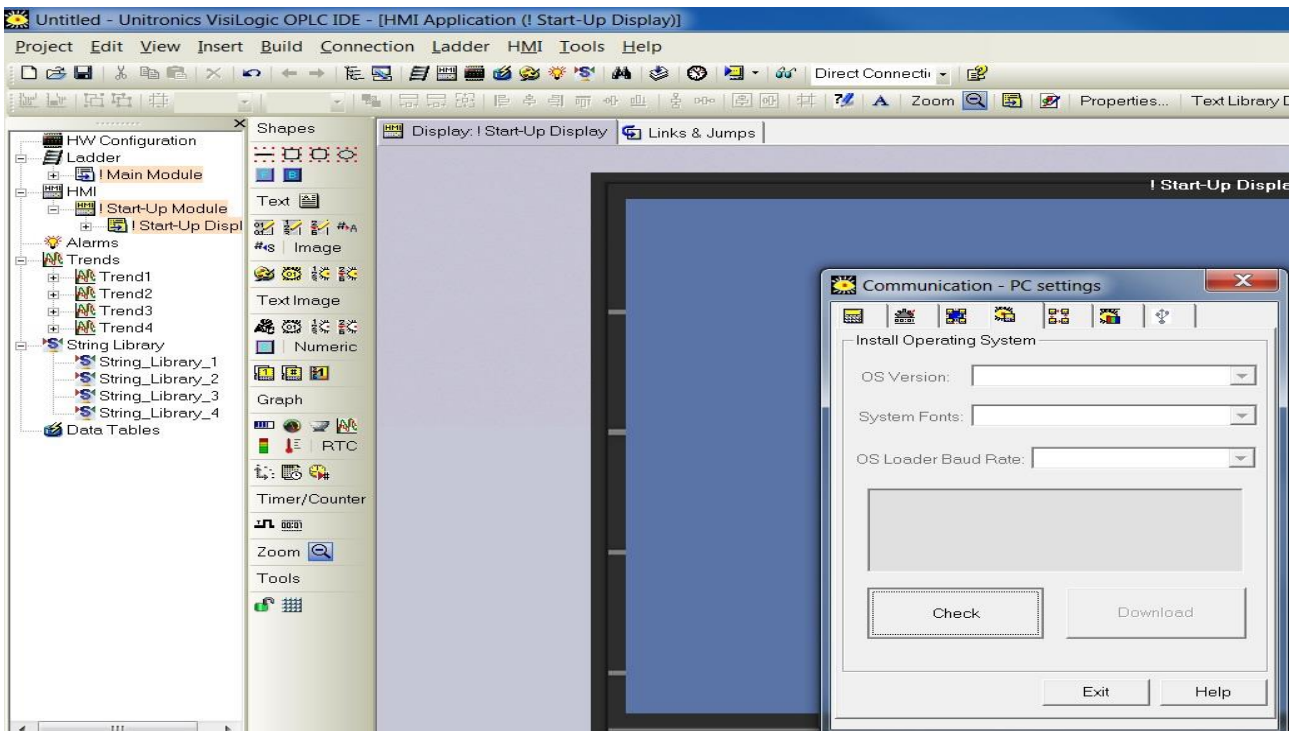


7. Now we need to install this new OS into the PLC, so press Ctrl+F9 to open the 'Communication' window
8. In the 'Communication' window go to the 4<sup>th</sup> tab along, the 'Operating System' tab
9. Click the 'Check' button, Visilogic will then check to see if the Operating System on the PLC is up to date.

### PLC control- PLC OS Update Visilogic

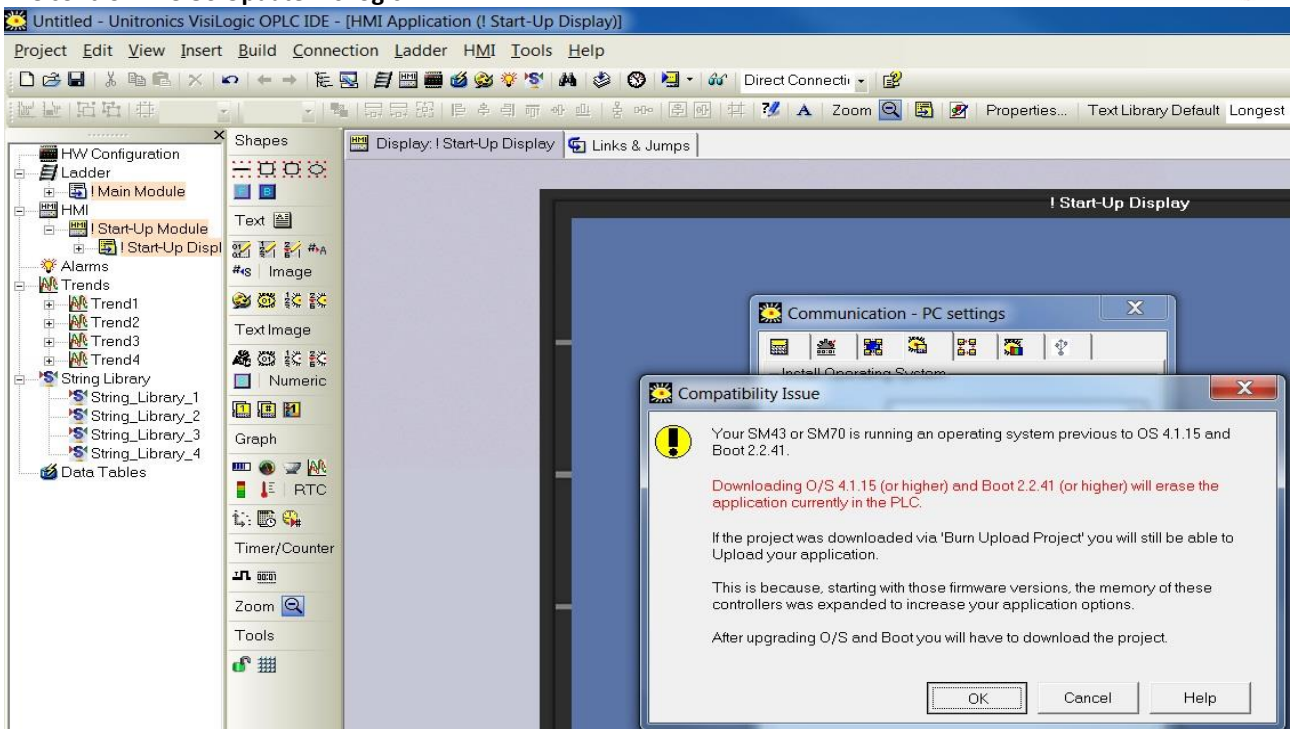

10. If the Operating System in the PLC is not up to date this window will appear, make sure you have a saved copy of the program in the PLC and click 'OK'

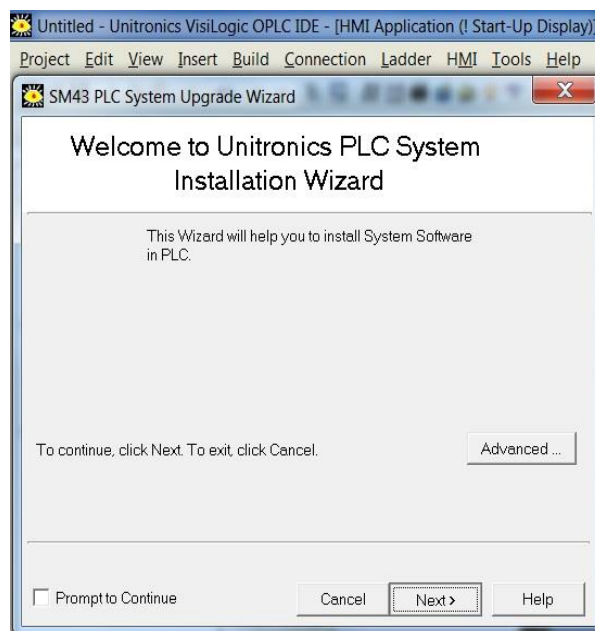

11. This will bring up this PLC System installation wizard, click 'Next' and follow the Wizard for installation
12. You can then continue as normal, download your program into the PLC as you would normally and enjoy all the benefits of an updated Operating System