PLC control- PLC OS Update VisiLogic

i4 Automation Ltd e Solutions for Industry

PLC OS Update in VisiLogic

🞇 Untitled - Unitronics VisiLogic OPLC IDE - [HMI Application (! Start-Up Display)]										
Project Edit View Insert	<u>B</u> uild <u>C</u> onne	ction <u>L</u> adder H <u>N</u>	<u>I Iools H</u> elp							
🗋 🗅 😂 🖬 👗 🐚 🖻 🗆 🗶 🖛 👄 → 🔃 🛃 🖽 📾 🥝 🥸 🥙 🦓 🧐 🦛 🤣 🔇 💆 🖬 🖉										
世上日日日 :			· 의 ㅠ 아 <u>바</u> 운	∞ ◎ ● ● ■ ■ ■	🌠 🔥 Zoom 🔍 🔄 💇 🗆	Properties Text Library [
HW Configuration HW Configuration Ladder HMI HI Kart-Up Module HMI Kartendl K Trendl K Trendl K Trendl K Trendd K K Trendd K K Trendd K K Trendd K K K K K K K K K K K K K K K K K K K	Shapes Shapes Text D Text D Shapes Text Mage Shapes Text Image Shapes Text Image Shapes Text Image Shapes Shapes Text Mage Shapes Shapes Text Mage Shapes Shapes Text Mage Shapes	Display: I Start-U	Ip Display 😨 Links (3. Jumps	Check	gs				

- To install the new OS into the PLC, press Ctrl+F9 to open the 'Communication' window
 In the 'Communication' window go to the 4th tab along, the 'Operating System' tab
 Click the 'Check' button, VisiLogic will then check to see if the Operating System on the PLC is up to date.

🔀 Untitled - Unitronics VisiLogic OPLC IDE - [HMI Application (! Start-Up Display)]										
Project Edit View Insert	<u>B</u> uild <u>C</u> onne	ection <u>L</u> adder H <u>M</u> I <u>T</u> ools <u>H</u> elp								
🗅 😂 🖬 🐍 🗶 📭 🖻 🗶 🖛 🔶 🖛 🗮 🔜 📁 🚟 🍏 🎯 🂝 🥸 🖊 🤣 🎯 🦉 🖓 🖓 🖓										
🔣 🔄 四 百 百 🕂 🔹 🔄 📲 🗐 扇 踢 停 净 引 萌 49 鱼 条 99 🖗 停 印 🕸 林 🧭 🗛 Zoom 🧟 🛃 📝 Properties Text Library Default Longest										
HW Configuration HW Configuration HW Configuration Ladder Hill Istart-Up Module Istart-Up Displ Airms Mill Mill	Shapes Text Text Text Text Text Text Text Image Text	I start-Up Display I start-Up Dis								

PLC control- PLC OS Update VisiLogic



4. If the Operating System in the PLC is not up to date this window will appear, make sure you have a saved copy of the program in the PLC and click 'OK'

🥌 Untitled - Ur	nitronics VisiLogi	c OPLC IDE -	[HMI Appli	cation (! St	art-Up	Display)]			
<u>Project</u> <u>E</u> dit	<u>V</u> iew Insert B	uild <u>C</u> onne	ction <u>L</u> ado	der H <u>M</u> I	<u>T</u> ools	<u>H</u> elp			
SM43 PLC	System Upgrade	Wizard	2.82			X			
Welcome to Unitronics PLC System Installation Wizard									
This Wizard will help you to install System Software in PLC.									
To continue, click Next. To exit. click Cancel. Advanced									
Prompt to (Continue	C	ancel	Next >	He	ilp			

- 5. This will bring up this PLC System installation wizard, click 'Next' and follow the Wizard for installation
- 6. You can then continue as normal, download your program into the PLC as you would normally and enjoy all the benefits of an updated Operating System

Tom Johnson October 2015