


Calibrate HMI Touch Screen


Calibrate HMI Touch Screen

If Your calibration is off centre so much that pressing UniApps isn't an option please follow "[Linking PLC with Virtual HMI](#)" Application Notes to connect Via Virtual HMI to get to the calibration.

- 1) Press Finger down on the top right of your screen for 3 seconds.

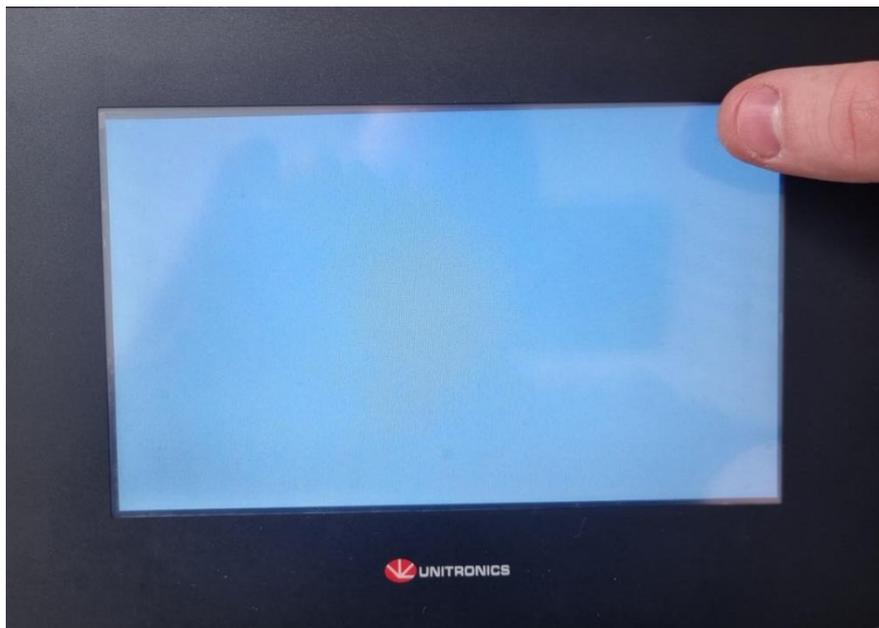


- 2) Press UniApps icon.

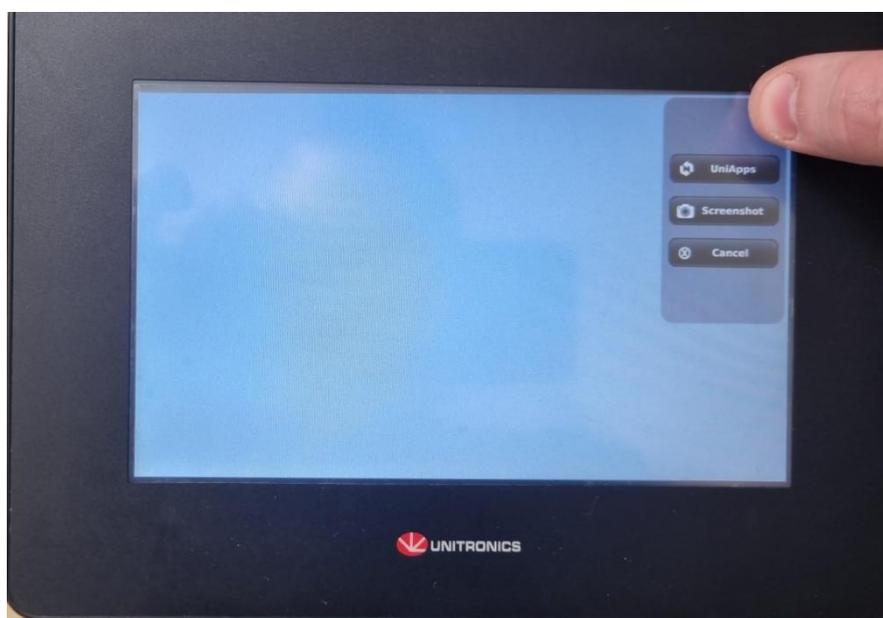

Calibrate HMI Touch Screen

3) Press Right button.

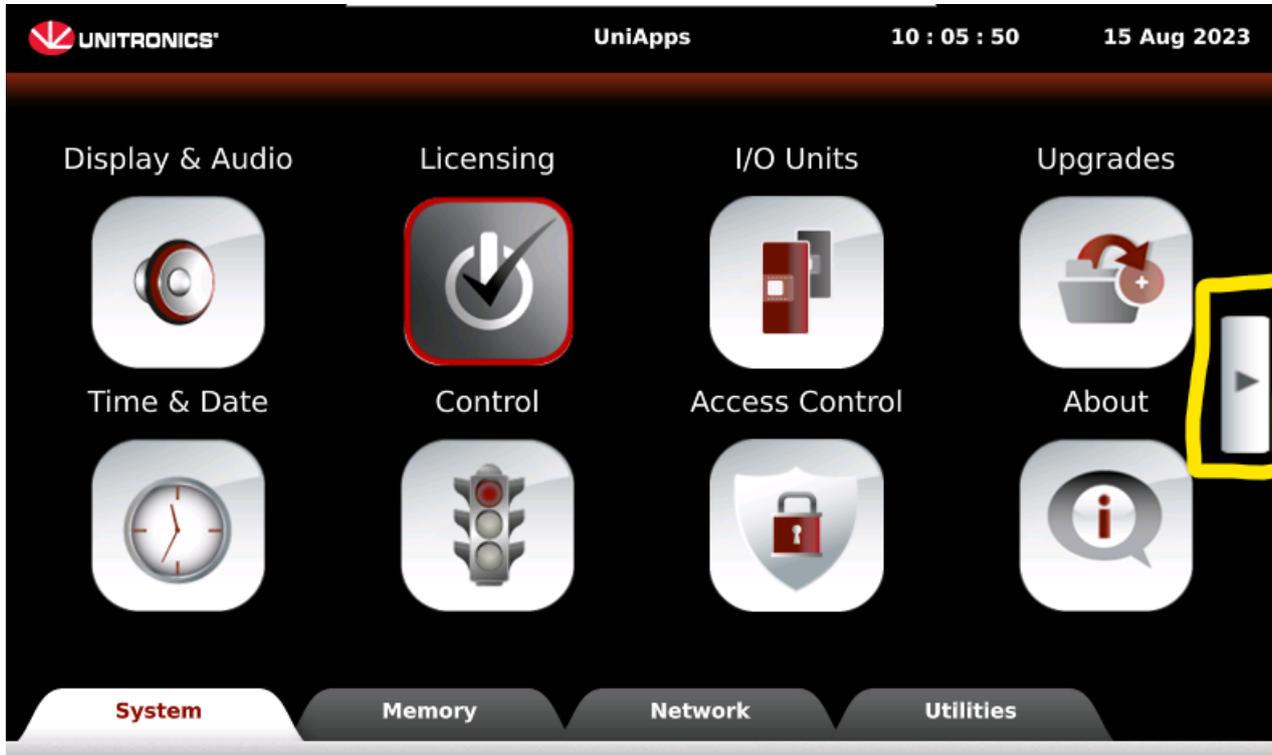

4) Press Touch Screen.



Calibrate HMI Touch Screen

- 5) Press “Start Calibration” – after pressing this please follow and press the commands on screen as accurately as you can

