


How to Connect to Your PLC through UniCloud VPN

1. On UniCloud, click on the VPC button of the asset you wish to connect.

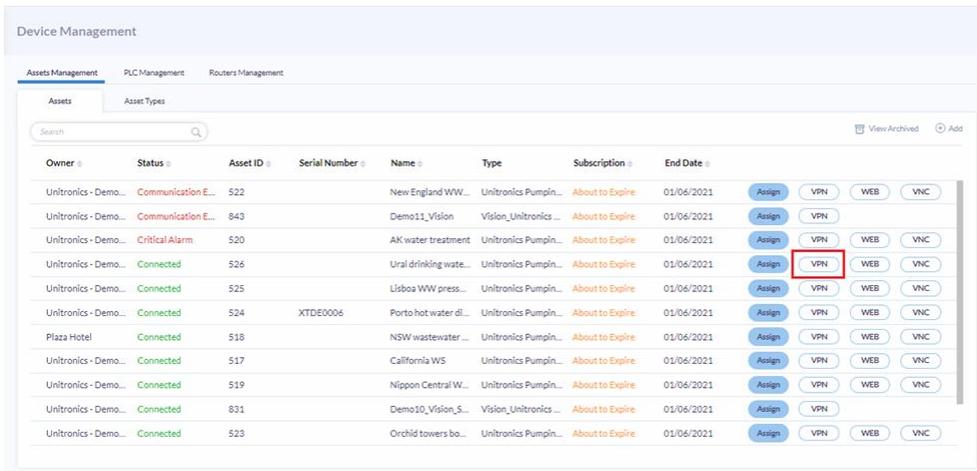

2. This window will open, if it's first use VPN click on the link to install the VPN remote client.

Click start.




3. This is the VPN window, click on the button with the red rectangular to view the ports required for connection




N.Rocks

11/09/2023

4. On UniLogic on PC-PLC communication, insert IP and the ports mark in red rectangular.

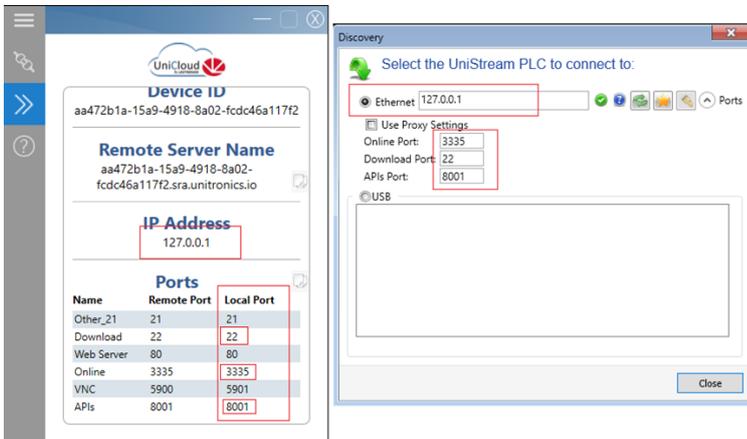

5. If your connection does not get a 'green tick', close the VPN connection by right click on the right-down banner icon as shown below and try again.

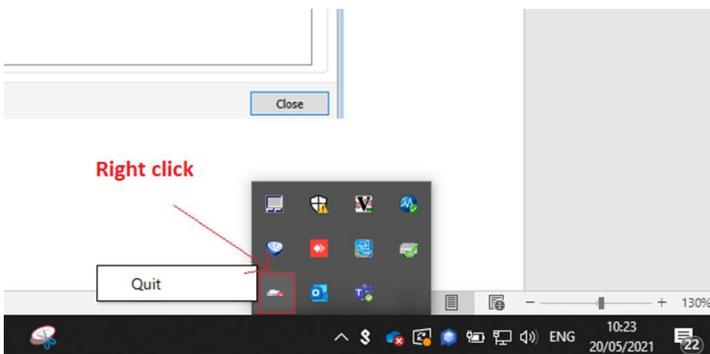

If there are any problems during this process, please contact [i4 Automation](http://www.i4automation.co.uk) for assistance.